

Assembly Information RD93 Bellows Change

Please use guide in conjunction with manual

- 1) Remove grub screw (13)
- 2) Carefully pull off the body assembly, noting the shaft is bent.
- 3) Remove clip (12)
- 4) Pull out shaft, taken care as the shaft is bent.

